



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
PTY / HDMI	/ AV
RDS / RESOL.	-/--
DISPLAY	
ZOOM	
SETUP	
/ S - TITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV.	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
/ RETURN	BACK
SLEEP	SLEEP
VSN	TV/DTV
DIMMER	INFO

ORIGINAL	SUPERIOR
PROG. / MEMO	EPG
MARKER	FAV
OPEN / CLOSE	
PAUSE	
STOP	
REW	GREEN
PLAY	YELLOW
FWD	BLUE
/ AUDIO	SHIFT+MUTE
XTS Pro	SHIFT+MENU
SEARCH	SHIFT+EXIT
AUX	SHIFT+1
DVD	SHIFT+2
TUNER	SHIFT+3
USB	SHIFT+4
PRESET NEXT	SHIFT+UP
PRESET PREV.	SHIFT+DOWN
TUN -	SHIFT+LEFT
TUN+	SHIFT+RIGHT
REPEAT	SHIFT+BACK
REPEAT A - B	SHIFT+SLEEP
TITLE	SHIFT+INFO
SOUND	SHIFT+FAV