



ORIGINAL	REPLACEMENT	ORIGINAL	REPLACEMENT
POWER	POWER	GREEN / TXT	GREEN
MUTE	MUTE	YELLOW / TIMER	YELLOW
MENU	MENU	BLUE / AUDIO	BLUE
EXIT	EXIT	SAT / (A-B)	SHIFT+7
1/2/3/4/5	1/2/3/4/5	APPS	SHIFT+8
6/7/8/9	6/7/8/9	SKIP PREV. / F3	SHIFT+ P-
0 / ZOOM	0	SKIP NEXT / F4	SHIFT+ P+
USB	AV	STEP	SHIFT+SLEEP
VF		STOP	SHIFT+ 
OPT.		REC / B.MARK	SHIFT+RED
VOL+	VOL+	REW / F1	SHIFT+GREEN
VOL-	VOL-	PLAY / PAUSE	SHIFT+YELLOW
PAGE/CH. +	P+	FWD / F2	SHIFT+BLUE
PAGE/CH. -	P-		
UP	UP		
DOWN	DOWN		
LEFT	LEFT		
RIGHT	RIGHT		
OK	OK		
RECALL	BACK		
 / 	TV/DTV		
INFO	INFO		
EPG / SEEK	EPG		
FAV / REPEAT	FAV		
RED / SUB.T.	RED		