
















 






 
 



 


 
 
Original	Recharge
 Power	 Power
 [i+]	 Info
 AV1	 AV
 AV1	 Shift + 1
 Rec/AV2	 Shift + 2
 Rec/AV2	 Rec
 Stop/AV3	 Shift + 3
 Stop/AV3	 Stop
 Play/AV4	 Shift + 4
 Play/AV4	 Play
 AV5	 Shift + 5
 AV5	 Shift + AV
 Pause/AV6	 Shift + 6
 Pause/AV6	 Pause
 <</RGB1	 Shift + 7
 <</RGB1	 <<
 >>/RGB2	 >>

Original	Recharge
 >>/RGB2	 Shift + 8
 Menu	 Menu
 [>I<]/Recall	 Pre Ch
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 J/S.Mode	 Shift + Dual
 (I)/P.Mode	 Shift + Format
 Vol+	 Vol +
 Vol-	 Vol -
 I/II	 Dual
 Mute	 Mute
 P+	 Ch +
 P-	 Ch -
 1	 1






 


 








 

 

 

 

 



 


	Original	Rechange		Original	Rechange
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	[]/2-4-12		Back		
	[≡]		Guide		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	[≡i]		Options		
	[≡x]		TV/R		

	Original	Rechange
	[...]/Slide Show	 Subt
	[≡?]/Rotate	 3D
	[≡]	 Text
	[<>]	 Format
	Swivel	 Smart
	Photo	 Media




 



 



























 

 






	Original	Recharge	Original	Recharge
	Power			
	OK			
	Up			
	Down			
	Right			
	Left			
	Menu			
	Stop			
	Play			
	Pause			
	<<			
	>>			
	P+			
	P-			





Original		Rechange		Original		Rechange	
	Power		Power		8		8
	OK		Ok		9		9
	Up		Up		0		0
	Down		Down				
	Right		Right				
	Left		Left				
	Vol+		Vol +				
	Vol-		Vol -				
	P+		Ch +				
	P-		Ch -				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				

