

BEKO
TV
BK55S

Mandis Shop S.L.
Sant Cugat del Vallès (Barcelona)
info@mandis.es



Layout Keys	Direct	Shift	Layout Keys	Direct	Shift
POWER	Power		V	Down	
MUTE	Mute		EXIT		
1	1		BACK		
2	2		VOL+	Vol+	
3	3		VOL-	Vol-	
4	4		INFO	i	
5	5		HAV(IST)	Swap	
6	6		CH+	PR+	
7	7		CH-	PR-	
8	8		TEXT	TXT	
9	9		<?>		
0	0		---	SUB	
VOID	MIX		TV/RADIO	Reveal	
MENU	Menu		OP1+	Double	
>PLAY			SOURCE	AV/TV	
PAUSE			WFORMAT	16:9	
[STOP	Stop		WIDE		
oRECORD					
<<					
>>					
<<					
>>					
RFD	Red				
GRFN	Green				
YELLOW	Yellow/Timer				
BLUE	Blue/→ ←				
MEDIA	Update				
EPG/GUIDE	-/--				
OK	OK				
^	Up				
<	Left				
>	Right				