

SAMSUNG  
AMPLIFICADOR  
AH5902305A-AMP

Mandis Shop S.L.  
Sant Cugat del Vallès (Barcelona)  
info@mandis.es

TV=TV; DVD=DVD; BD=SAT AMP=AUX



Layout Keys	Direct	Shift	Layout Keys	Direct	Shift
POWER	Power		V	Down	
MUTE	Mute		EXIT	Exit	
1	1	BD/DVD	BACK	Return	
2	2	SAT	VOL+	Vol+	
3	3	TV	VOL-	Vol-	
4	4	CD	INFO	Info	
5	5	Multi CH	RAW(IST)	DSP	
6	6	AUX	CH+	Tuning/CH+	
7	7	iPod	CH-	Tuning/CH-	
8	8/Sleep		TEXT		
9	9		<?>	MO/ST	
0	0/Audio Assign		...	Subwoofer	
VOID	ASC		TV/RADIO	Tuner/Memory	
MENU	Setup/Menu		CH1+		
>PLAY	Play		SOURCE	Input Select/TV Source	
[ ]PAUSE	Pause		V-FORMAT		
[ ]STOP	Stop		WIDE		
RECORD					
<<	<<				
>>	>>				
<<	<<				
>>	>>				
RFD					
GRFFM					
YELLOW					
BLUE					
MEDIA	Dimmer				
EPG(GUIDE)	Prologic				
OK	Enter				
^	Up				
<	Left				
>	Right				