













 

 



 

 



 

 

 







Original	Rechange
 POWER	 Power
 INFO	 Info / Angle
 MUTE	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 SOURCE	 AV / Input / RDS
 0	 0
 AUDIO	 Audio / Lang / I/II
 FORMAT	 Picture / Format
 BACK	 Back / Return

Original	Rechange
 MENU	 Menu / Home
 EXIT	 Exit / Cancel / Clear
 UP	 Up
 LEFT	 Left
 ENTER	 OK
 RIGHT	 Right
 VOL+	 Vol+
 DOWN	 Down
 CH+	 CH+ / Page+
 VOL-	 Vol-
 CH-	 CH- / Page-
 LIST	 Smart / List
 SLEEP	 Sleep / Timer
 EPG	 Guide / EPG / -/-
 FAV	 Fav / Marker / PC
	 Red / Tune-
	 Red / Netflix / Search





	Original	Recharge	Original	Recharge
		 >> / Tune+		
		 Green / APP / Repeat		
		 I<< / Preset-		
		 Yellow / YouTube / Repeat		
		 Blue / Prime Video / Random		
		 >> / Preset+		
		 Play / Slow		
		 Pause / Step / Freeze		
		 Text / Goto		
		 Stop / Hold		
		 Subtitle / EQ		
		 TV/Radio /		
		 Setup / OPT /		
		 Display / Media		
		 D.Menu / Top		
		 Rec / Rec Mode		

