



| Original | Rechange         |
|----------|------------------|
| Power    | Power            |
| Mute     | Mute / Dimmer    |
| 1        | 1                |
| 2        | 2                |
| 3        | 3                |
| 4        | 4                |
| 5        | 5                |
| 6        | 6                |
| 7        | 7                |
| 8        | 8                |
| 9        | 9                |
| CH.List  | Smart / List     |
| 0        | 0                |
| Recall   | Back / Return    |
| Vol+     | Vol+             |
| PIC.Mode | Picture / Format |
| S.Mode   | Sound / Title    |

| Original  | Rechange               |
|-----------|------------------------|
| CH+       | CH+ / Page+            |
| Vol-      | Vol-                   |
| Source    | AV / Input / RDS       |
| CH-       | CH- / Page-            |
| Up        | Up                     |
| Left      | Left                   |
| OK        | OK                     |
| Right     | Right                  |
| Exit      | Exit / Cancel / Clear  |
| Down      | Down                   |
| Menu      | Menu / Home            |
| Rec       | Rec / Rec Mode         |
| Timeshift | Shift + Pause / Step / |
| Timer     | Shift + Sleep / Timer  |
| Rec.List  | Shift + Smart / List   |
| Red       | Red / Netflix / Search |
| Green     | Green / APP / Repeat   |





| Original | Recharge                    |
|----------|-----------------------------|
| Yellow   | Yellow / YouTube / Repeat   |
| Blue     | Blue / Prime Video / Random |
| Aspect   | Shift + Picture / Format    |
| Tv/Radio | TV/Radio /                  |
| Sleep    | Sleep / Timer               |
| Subtitle | Subtitle / EQ               |
| Index    | Info / Angle                |
| Reveal   | D.Menu / Top                |
| Audio    | Audio / Lang I/II           |
| Display  | Display / Media             |
| Text     | Text / Goto                 |
| Size     | Zoom / Size                 |
| Play     | Play / Slow                 |
| Pause    | Pause / Step / Freeze       |
| Subpage  | Setup / OPT /               |
| Stop     | Stop / Hold                 |
| Hold     | Shift + Stop / Hold         |

Hold

| Original | Recharge      |
|----------|---------------|
| I<<      | I<< / Preset- |
| >>I      | >>I / Preset+ |
| <<       | << / Tune-    |
| >>       | >> / Tune+    |

