 



 







 

 
 



 
 

 
 
 
 

 
 
 
 
 
 

 
 
 




 
 
 



 


 



 
 
 

 



 
 
 
 


 




| | Original | Recharge | | Original | Recharge |
|---|-------------|---|---|-------------|---|
|  | Standby |  +  Shift + Power |  | A/B/C/D/E |  EXIT Exit |
|  | Power |  Power |  | < Preset |  << |
|  | Scene 1 |  Red |  | Preset > |  >> |
|  | Scene 2 |  Green |  | Sleep |  Sleep |
|  | Scene 3 |  Yellow |  | Level |  Media |
|  | Scene 4 |  Blue |  | Menu |  Menu |
|  | CD |  1 |  | Audio Sel |  Dual |
|  | MD/CD-R |  2 |  | Display |  Info |
|  | Tuner |  3 |  | Return |  Back |
|  | Multi CH In |  4 |  | Up |  Up |
|  | DVD |  5 |  | Right |  Right |
|  | DTV/CBL |  6 |  | Down |  Down |
|  | DVR |  7 |  | Left |  Left |
|  | V-AUX |  8 |  | Enter |  Ok |
|  | Vol- |  Vol - |  | Night |  Guide |
|  | Vol+ |  Vol + |  | Sur. Decode |  Pre Ch |
|  | Mute |  Mute |  | Straight |  Subt |





| Original | Recharge | Original | Recharge |
|---|----------------------------|----------|----------|
|  | CH - Ch - | | |
|  | CH + Ch + | | |
|  | SETTINGS OPT Options | | |
|  | REPEAT TEXT Text | | |
|  | SEARCH TV/R TV/R | | |
|  | ZOOM Eject | | |
|  | TIMER AV AV | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

