



 

 

 



 



 



 


 











 
 
 
 
 
 

 





Original		Recharge		Original		Recharge	
	POWER		Power		REPEAT/GREEN/▼		Green / APP / Repeat
	INFO		Info / Angle		7		7
	HDMI CONTROL		Smart / List		8		8
	SLEEP		Sleep / Timer		9		9
	SCREEN		Picture / Format		ROOT/YELLOW		Yellow / YouTube / Repeat
	SOURCE		AV / Input / RDS		RETURN		Back / Return
	PRESETS		Setup / OPT /		0		0
	1		1		MENU		Menu / Home
	2		2		TITLE/BUE		Sound / Title
	3		3		TITLE/BUE		Blue / Prime Video / Random
	ZOOM/RED/▲		Zoom / Size		UP		Up
	ZOOM/RED/▲		Shift + CH+ /		LEFT		Left
	ZOOM/RED/▲		Red / Netflix / Search		OK/SELECT		OK
	4		4		RIGHT		Right
	5		5		DOWN		Down
	6		6		P+		CH+ / Page+
	REPEAT/GREEN/▼		Shift + CH- /		P-		CH- / Page-

Page-





Original	Recharge	Original	Recharge
 V-	 Vol-	 PAUSE	 Pause / Step / Freeze
 V+	 Vol+	 << / Tune-	 << / Tune-
 FAV	 Fav / Marker / PC	 >> / Tune+	 >> / Tune+
 LANG	 Audio / Lang I/II	 I<< / Preset-	 I<< / Preset-
 SUBTITLE	 Subtitle / EQ	 >>I / Preset+	 >>I / Preset+
 MUTE	 Mute / Dimmer		
 SWAP/↔	 Shift + Back / Return		
 EPG	 Guide / EPG / -/--		
 [*] / [..]	 D.Menu / Top		
 TEXT	 Text / Goto		
 C	 Exit / Cancel / Clear		
 DISPLAY	 Display / Media		
 ANGLE	 Shift + Info / Angle		
 SEARCH MODE	 Shift + Red / Netflix /		
 REC	 Rec / Rec Mode		
 STOP	 Stop / Hold		
 PLAY	 Play / Slow		

