



| Original  |                | Recharge  |                        | Original  |                | Recharge  |                             |
|---|----------------|---|------------------------|---|----------------|---|-----------------------------|
|    | POWER          |    | Power                  |    | REPEAT/GREEN/▼ |    | Green / APP / Repeat        |
|    | INFO           |    | Info / Angle           |    | 7              |    | 7                           |
|    | HDMI CONTROL   |    | Smart / List           |    | 8              |    | 8                           |
|    | SLEEP          |    | Sleep / Timer          |    | 9              |    | 9                           |
|    | SCREEN         |    | Picture / Format       |    | ROOT/YELLOW    |    | Yellow / YouTube / Repeat   |
|    | SOURCE         |    | AV / Input / RDS       |    | RETURN         |    | Back / Return               |
|    | PRESETS        |    | Setup / OPT /          |    | 0              |    | 0                           |
|    | 1              |    | 1                      |    | MENU           |    | Menu / Home                 |
|    | 2              |    | 2                      |    | TITLE/BLUE     |    | Sound / Title               |
|   | 3              |   | 3                      |   | TITLE/BLUE     |   | Blue / Prime Video / Random |
|  | ZOOM/RED/▲     |  | Zoom / Size            |  | UP             |  | Up                          |
|  | ZOOM/RED/▲     |  | Shift + CH+ /          |  | LEFT           |  | Left                        |
|  | ZOOM/RED/▲     |  | Red / Netflix / Search |  | OK/SELECT      |  | OK                          |
|  | 4              |  | 4                      |  | RIGHT          |  | Right                       |
|  | 5              |  | 5                      |  | DOWN           |  | Down                        |
|  | 6              |  | 6                      |  | P+             |  | CH+ / Page+                 |
|  | REPEAT/GREEN/▼ |  | Shift + CH- /          |  | P-             |  | CH- / Page-                 |

Page-





| Original    | Recharge                |
|-------------|-------------------------|
| V-          | Vol-                    |
| V+          | Vol+                    |
| FAV         | Fav / Marker / PC       |
| LANG        | Audio / Lang I/II       |
| SUBTITLE    | Subtitle / EQ           |
| MUTE        | Mute / Dimmer           |
| SWAP/↔      | Shift + Back / Return   |
| EPG         | Guide / EPG / -/--      |
| [*] / [..]  | D.Menu / Top            |
| TEXT        | Text / Goto             |
| C           | Exit / Cancel / Clear   |
| DISPLAY     | Display / Media         |
| ANGLE       | Shift + Info / Angle    |
| SEARCH MODE | Shift + Red / Netflix / |
| REC         | Rec / Rec Mode          |
| STOP        | Stop / Hold             |
| PLAY        | Play / Slow             |

| Original | Recharge              |
|----------|-----------------------|
| PAUSE    | Pause / Step / Freeze |
| <<       | << / Tune-            |
| >>       | >> / Tune+            |
| I<<      | I<< / Preset-         |
| >>I      | >>I / Preset+         |
|          |                       |
|          |                       |
|          |                       |
|          |                       |
|          |                       |
|          |                       |
|          |                       |
|          |                       |
|          |                       |
|          |                       |
|          |                       |
|          |                       |
|          |                       |
|          |                       |
|          |                       |
|          |                       |
|          |                       |

