

 




 








 
 

 

 





| Original | | Recharge | | Original | | Recharge | |
|---|----------------|---|------------------------|---|----------------|---|-----------------------------|
|  | POWER |  | Power |  | REPEAT/GREEN/▼ |  | Green / APP / Repeat |
|  | INFO |  | Info / Angle |  | 7 |  | 7 |
|  | HDMI CONTROL |  | Smart / List |  | 8 |  | 8 |
|  | SLEEP |  | Sleep / Timer |  | 9 |  | 9 |
|  | SCREEN |  | Picture / Format |  | ROOT/YELLOW |  | Yellow / YouTube / Repeat |
|  | SOURCE |  | AV / Input / RDS |  | RETURN |  | Back / Return |
|  | PRESETS |  | Setup / OPT / |  | 0 |  | 0 |
|  | 1 |  | 1 |  | MENU |  | Menu / Home |
|  | 2 |  | 2 |  | TITLE/BLUE |  | Sound / Title |
|  | 3 |  | 3 |  | TITLE/BLUE |  | Blue / Prime Video / Random |
|  | ZOOM/RED/▲ |  | Zoom / Size |  | UP |  | Up |
|  | ZOOM/RED/▲ |  | Shift + CH+ / |  | LEFT |  | Left |
|  | ZOOM/RED/▲ |  | Red / Netflix / Search |  | OK/SELECT |  | OK |
|  | 4 |  | 4 |  | RIGHT |  | Right |
|  | 5 |  | 5 |  | DOWN |  | Down |
|  | 6 |  | 6 |  | P+ |  | CH+ / Page+ |
|  | REPEAT/GREEN/▼ |  | Shift + CH- / |  | P- |  | CH- / Page- |

Page-





| Original | Recharge |
|---|---|
|  V- |  Vol- |
|  V+ |  Vol+ |
|  FAV |  Fav / Marker / PC |
|  LANG |  Audio / Lang I/II |
|  SUBTITLE |  Subtitle / EQ |
|  MUTE |  Mute / Dimmer |
|  SWAP/↔ |  Shift + Back / Return |
|  EPG |  Guide / EPG / -/-- |
|  [*] / [..] |  D.Menu / Top |
|  TEXT |  Text / Goto |
|  C |  Exit / Cancel / Clear |
|  DISPLAY |  Display / Media |
|  ANGLE |  Shift + Info / Angle |
|  SEARCH MODE |  Shift + Red / Netflix / |
|  REC |  Rec / Rec Mode |
|  STOP |  Stop / Hold |
|  PLAY |  Play / Slow |

| Original | Recharge |
|---|---|
|  PAUSE |  Pause / Step / Freeze |
|  << |  << / Tune- |
|  >> |  >> / Tune+ |
|  I<< |  I<< / Preset- |
|  >>I |  >>I / Preset+ |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

