



| Original | | Recharge | | Original | | Recharge | |
|---|-----------|---|-----------------------|---|-----------|---|-----------------------------|
|  | Power |  | Power |  | Vol+ |  | Vol+ |
|  | Mute |  | Mute / Dimmer |  | CH- |  | CH- / Page- |
|  | 1 |  | 1 |  | I-II |  | Audio / Lang I/II |
|  | 2 |  | 2 |  | Vol- |  | Vol- |
|  | 3 |  | 3 |  | Up |  | Up |
|  | 4 |  | 4 |  | Left |  | Left |
|  | 5 |  | 5 |  | OK/Select |  | OK |
|  | 6 |  | 6 |  | Right |  | Right |
|  | 7 |  | 7 |  | Menu |  | Menu / Home |
|  | 8 |  | 8 |  | Down |  | Down |
|  | 9 |  | 9 |  | TV/DTV |  | TV/Radio / |
|  | AV/Source |  | AV / Input / RDS |  | Red |  | Red / Netflix / Search |
|  | 0 |  | 0 |  | Green |  | Green / APP / Repeat |
|  | Exit |  | Exit / Cancel / Clear |  | Yellow |  | Yellow / YouTube / Repeat |
|  | -/-- |  | -/-- |  | Blue |  | Blue / Prime Video / Random |
|  | CH+ |  | CH+ / Page+ |  | [≡]/Text |  | Text / Goto |
|  | [i]/Info |  | Info / Angle |  | [≡o] |  | Sleep / Timer |



