



Original	Recharge
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AV/Source	 AV / Input / RDS
 0	 0
 Exit	 Exit / Cancel / Clear
 -/--	 Shift + Guide / EPG / -/--
 CH+	 CH+ / Page+
 [i]/Info	 Info / Angle

Original	Recharge
 Vol+	 Vol+
 CH-	 CH- / Page-
 I-II	 Audio / Lang I/II
 Vol-	 Vol-
 Up	 Up
 Left	 Left
 OK/Select	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 TV/DTV	 TV/Radio /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [≡]/Text	 Text / Goto
 [≡o]	 Sleep / Timer





Original		Recharge		Original		Recharge	
	[≡+]/[X]		<< / Tune-				
	[≡x]/[∞]		>> / Tune+				
	[.] / [*]		I<< / Preset-				
	[≡♦] / [+]/Wide		Picture / Format				
	[≡?]		>>I / Preset+				
	[≡i] / Guide		Guide / EPG / -/--				
	P<P/SWAP		Fav / Marker / PC				
	PP		Back / Return				

