



 



 







 



 



 



 



 



 



 



 



 

 



 

 

 

 











Original		Recharge		Original		Recharge	
	Power		Power		Green		Green / APP / Repeat
	DTV		Shift + TV/Radio / Program		Yellow		Yellow / YouTube / Repeat
	TV		TV/Radio /		Blue		Blue / Prime Video / Random
	AV		AV / Input / RDS		Vol+		Vol+
	1		1		i		Info / Angle
	2		2		CH+		CH+ / Page+
	3		3		Vol-		Vol-
	4		4		Mute		Mute / Dimmer
	5		5		CH-		CH- / Page-
	6		6		EPG		Guide / EPG / -/-
	7		7		Option		Setup / OPT /
	8		8		Up		Up
	9		9		Left		Left
	Text		Text / Goto		OK		OK
	0		0		Right		Right
	PRE-CH		Back / Return		Down		Down
	Red		Red / Netflix / Search		Menu		Menu / Home



