




 

 


 
 

 

 

 

 









 

 




 


 







Original	Rechange
 Power	 Power
 Mute	 Mute
 DTV	 Media
 Rec List	 List
 TXT	 Text
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Back	 Back

Original	Rechange
 TShift	 Eject
 Freeze	 3D
 Rec	 Rec
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Info	 Info
 Source	 AV
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 Enter	 Ok
 Menu	 Menu
 Exit	 Exit
 Vol+	 Vol +





Original		Rechange		Original		Rechange	
	Vol-		Vol -		-/--		Shift + Guide
	Guide		Guide		P.Mode		Shift + Format
	FAV		Pre Ch		S.Mode		Shift + Dual
	CH+		Ch +				
	CH-		Ch -				
	Hold / Play-Pause		Play				
	Pause		Pause				
	Reveal / <<		<<				
	Size / >>		>>				
	Index / Stop		D. Menu				
	Stop		Stop				
	I<<		I<<				
	Subpage / >>I		>>I				
	Format		Format				
	Audio		Dual				
	Subt		Subt				
	TV/Radio		TV/R				

