



| Original | | Recharge | | Original | | Recharge | |
|----------|-----------|----------|-----------------------------|----------|-------------|----------|-------------------|
| | Power | | Power | | 5 | | 5 |
| | Red / ↑ | | Red / Netflix / Search | | 6 | | 6 |
| | Green / ↓ | | Green / APP / Repeat | | 7 | | 7 |
| | Yellow | | Yellow / YouTube / Repeat | | 8 | | 8 |
| | Blue | | Blue / Prime Video / Random | | 9 | | 9 |
| | [≡] | | Text / Goto | | FAV | | Fav / Marker / PC |
| | [≡x] | | Exit / Cancel / Clear | | 0 | | 0 |
| | EPG | | Guide / EPG / -/- | | Tv/DTV | | TV/Radio / |
| | [*]/[■] | | Zoom / Size | | Vol- | | Vol- |
| | Screen | | Picture / Format | | Vol+ | | Vol+ |
| | Lang | | Audio / Lang I/II | | Mute | | Mute / Dimmer |
| | Subtitle | | Subtitle / EQ | | PR- | | CH- / Page- |
| | Sleep | | Sleep / Timer | | PR+ | | CH+ / Page+ |
| | 1 | | 1 | | Preset | | Smart / List |
| | 2 | | 2 | | Source | | AV / Input / RDS |
| | 3 | | 3 | | Info/[≡?] | | Info / Angle |
| | 4 | | 4 | | Swap/Recall | | Display / Media |





| | Original | Rechange | Original | Rechange |
|---|----------|---|----------|----------|
|  | Return |  Back / Return | | |
|  | Up |  | | |
|  | Left |  | | |
|  | OK |  | | |
|  | Right |  | | |
|  | Down |  | | |
|  | M |  Menu / Home | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

