




 


 









 



 

 





 





Original		Rechange		Original		Rechange	
	Power		Power		5		5
	Red / ↑		Red / Netflix / Search		6		6
	Green / ↓		Green / APP / Repeat		7		7
	Yellow		Yellow / YouTube / Repeat		8		8
	Blue		Blue / Prime Video / Random		9		9
	[≡]		Text / Goto		FAV		Fav / Marker / PC
	[≡x]		Exit / Cancel / Clear		0		0
	EPG		Guide / EPG / -/-		Tv/DTV		TV/Radio /
	[*]/[■]		Zoom / Size		Vol-		Vol-
	Screen		Picture / Format		Vol+		Vol+
	Lang		Audio / Lang I/II		Mute		Mute / Dimmer
	Subtitle		Subtitle / EQ		PR-		CH- / Page-
	Sleep		Sleep / Timer		PR+		CH+ / Page+
	1		1		Preset		Smart / List
	2		2		Source		AV / Input / RDS
	3		3		Info/[≡?]		Info / Angle
	4		4		Swap/Recall		Display / Media





Original	Rechange	Original	Rechange
 Return	 Back / Return		
 Up	 Up		
 Left	 Left		
 OK	 OK		
 Right	 Right		
 Down	 Down		
 M	 Menu / Home		

Original	Rechange

