






 

 

 









Original		Recharge		Original		Recharge	
	Power		Power		5		5
	Red / ↑		Red / Netflix / Search		6		6
	Green / ↓		Green / APP / Repeat		7		7
	Yellow		Yellow / YouTube / Repeat		8		8
	Blue		Blue / Prime Video / Random		9		9
	[≡]		Text / Goto		FAV		Fav / Marker / PC
	[≡x]		Exit / Cancel / Clear		0		0
	EPG		Guide / EPG / -/-		Tv/DTV		TV/Radio /
	[*]/[■]		Zoom / Size		Vol-		Vol-
	Screen		Picture / Format		Vol+		Vol+
	Lang		Audio / Lang I/II		Mute		Mute / Dimmer
	Subtitle		Subtitle / EQ		PR-		CH- / Page-
	Sleep		Sleep / Timer		PR+		CH+ / Page+
	1		1		Preset		Smart / List
	2		2		Source		AV / Input / RDS
	3		3		Info/[≡?]		Info / Angle
	4		4		Swap/Recall		Display / Media





	Original	Rechange		Original	Rechange
	Return	 Back / Return			
	Up	 Up			
	Left	 Left			
	OK	 OK			
	Right	 Right			
	Down	 Down			
	M	 Menu / Home			

