





 
 

 
 
 

 
 
 

 
 
 



 



 
 


 
 



 





 
 

 
 
 
 
 
 




 

 

 







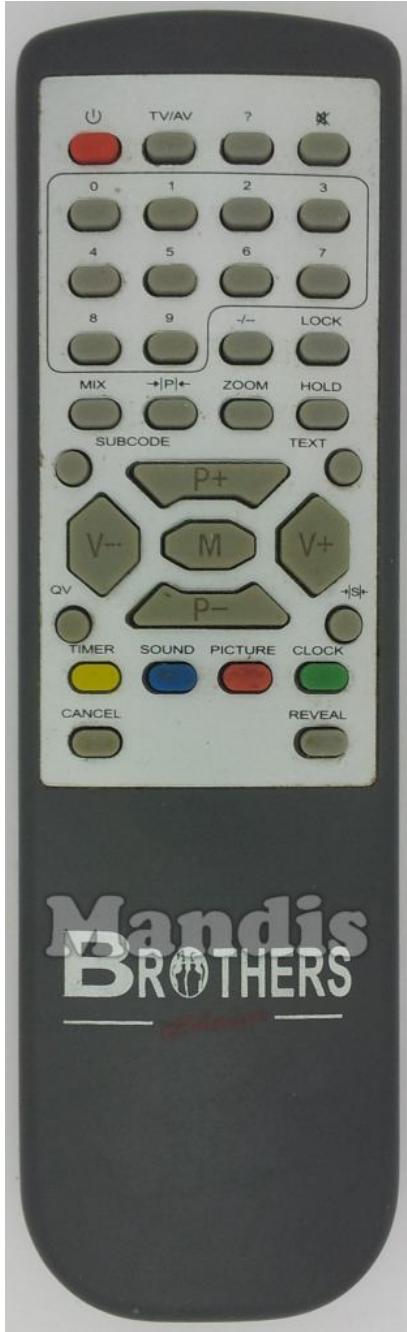 






 

 





Original		Recharge		Original		Recharge	
	Power		Power		Hold		Subt.
	Tv/AV		SRC		→ P ←		V-FOR
	?		VOD		Mix		MEDIA
	Mute		MUTE		Text		TEXT
	0		0		Subcode		OPT+
	1		1		QV		TV/R
	2		2		→ S ←		Audio
	3		3		Cancel		EXIT
	4		4		Reveal		BACK
	5		5		Yellow/Timer		Yellow (C)
	6		6		Blue/Sound		Blue (D)
	7		7		Red/Picture		Red (A)
	8		8		Green/Clock		Green (B)
	9		9		Up		UP
	-/--		-/-- / EPG		Down		DOWN
	Lock		P/C / FAV		Right		RIGHT
	Zoom		WIDE		Left		LEFT





Original	Rechange	Original	Rechange
 OK	 OK		
 P+	 CH +		
 P-	 CH -		
 Vol+	 VOL +		
 Vol-	 VOL -		
 M	 MENU		

