 







 

 









 



 





 

 



 





 

 



 



 



 

 











 



 

 

 

 









Original	Recharge	Original	Recharge
 Power	 Power	 OK	 OK
 [=]/Text	 Text / Goto	 Right	 Right
 I-II	 Audio / Lang I/II	 Down	 Down
 [<>]/[+]	 Shift + Picture / Format	 A/D	 Shift + Audio / Lang I/II
 AV/[?]	 AV / Input / RDS	 EPG	 Guide / EPG / -/-
 Red	 Red / Netflix / Search	 Vol+	 Vol+
 Green	 Green / APP / Repeat	 Mute	 Mute / Dimmer
 Yellow	 Yellow / YouTube / Repeat	 PR+	 CH+ / Page+
 Blue	 Blue / Prime Video / Random	 Vol-	 Vol-
 [...]	 Subtitle / EQ	 PR-	 CH- / Page-
 [1 2] Split Window	 Display / Media	 1	 1
 Cancel	 Exit / Cancel / Clear	 2	 2
 Option	 Setup / OPT /	 3	 3
 Tv Menu	 Menu / Home	 4	 4
 Digital Menu	 D.Menu / Top	 5	 5
 Up	 Up	 6	 6
 Left	 Left	 7	 7





Original	Recharge	Original	Recharge
 8	 8		
 9	 9		
 [i+]	 Info / Angle		
 0	 0		
 P<P/Back	 Back / Return		
 [-O-]/Active Ctrl	 Smart / List		
 DV3/Tv/Radio	 TV/Radio /		
 Sound Smart	 Sound / Title		
 Picture Smart	 Picture / Format		

