
 









| Original  |         | Rechange  |                         | Original  |          | Rechange  |                       |
|---|---------|---|-------------------------|---|----------|---|-----------------------|
|    | POWER   |    | Power                   |    | 9 wxyz   |    | 9                     |
|    | ←○      |    | Shift + Smart / List    |    | TV       |    | TV/Radio /            |
|    | **/0    |    | Shift + Display / Media |    | 0        |    | 0                     |
|    | *²/♀    |    | Shift + Red / Netflix / |    | ↔        |    | Shift + Back / Return |
|    | SOURCE  |    | AV / Input / RDS        |    | TV GUIDE |    | Guide / EPG / -/-     |
|    | PRESETS |    | Smart / List            |    | [≡]      |    | Text / Goto           |
|    | ≡≡      |    | Setup / OPT /           |    | MENU     |    | Menu / Home           |
|    | ♪/☺/▶   |    | Display / Media         |    | Q.MENU   |    | D.Menu / Top          |
|    | SLEEP   |    | Sleep / Timer           |    | UP       |    | Up                    |
|    | 1 . / @ |    | 1                       |    | LEFT     |    | Left                  |
|   | 2 abc   |   | 2                       |   | OK       |   | OK                    |
|  | 3 def   |  | 3                       |  | RIGHT    |  | Right                 |
|  | 4 ghi   |  | 4                       |  | DOWN     |  | Down                  |
|  | 5 jkl   |  | 5                       |  | BACK     |  | Back / Return         |
|  | 6 mno   |  | 6                       |  | →◻←      |  | Picture / Format      |
|  | 7 pqrs  |  | 7                       |  | EXIT     |  | Exit / Cancel / Clear |
|  | 8 tuv   |  | 8                       |  | *FAV     |  | Fav / Marker / PC     |





| Original   | Recharge  |
|--|---|
|  VOL+     |  Vol+                        |
|  MUTE     |  Mute / Dimmer               |
|  P+       |  CH+ / Page+                 |
|  VOL-     |  Vol-                        |
|  INFO     |  Info / Angle                |
|  P-       |  CH- / Page-                 |
|  REC      |  Rec / Rec Mode              |
|  PLAY     |  Play / Slow                 |
|  PAUSE    |  Pause / Step / Freeze       |
|  STOP    |  Stop / Hold                |
|  LANG.  |  Audio / Lang I/II         |
|  <<<    |  <<< / Tune-               |
|  >>>    |  >>> / Tune+               |
|  [≡]... |  Sound / Title             |
|  RED    |  Red / Netflix / Search    |
|  GREEN  |  Green / APP / Repeat      |
|  YELLOW |  Yellow / YouTube / Repeat |

| Original   | Recharge  |
|--|---|
|  BLUE |  Blue / Prime Video / Random |

