
 



 
 










 
 
 



 

 
 
 
 
 

 


 

 
 


Original	Recharge	Original	Recharge
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV
	ATV/DTV/Content Menu		Smart
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -

Original	Recharge	Original	Recharge
	Mute		Mute
	Guide/Top		Media
	Exit/Return		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu/DVD		Menu
	Tv/FAV/Radio/Set		TV/R
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[<>]		Format
	<[/]>		3D
	Subtitle		Subt

 








 

 

 
 
 

 

 
 
 


 

 

 
 
 
 

 

 

 

 
 


 



 







 

 

 

 
 
 

 





	Original	Rechange	Original	Rechange
	Text	 Text		
	II/II>/[▼]	 Pause		
	[i+]/[≡i]	 Info		
	O)I/II	 Dual		
	Stop	 Stop		
	Play/[≡o]	 Play		
	Eject	 Eject		
	I<</[≡?]	 I<<		
	<</[≡+]	 <<		
	>>/[≡◇]	 >>		
	>>I/[O]/[≡X]	 >>I		
	AD	 Shift + Subt		
	Audio	 Shift + Dual		

 
 
 
 
 
 
 
 

 




Original		Rechange		Original		Rechange	
	←[/]→		3D		Menu/DVD		Menu
	Power		Power		Tv/FAV/Radio/Set		TV/R
	1		1		Guide/Top		Guide
	2		2		[<>]		Format
	3		3		Text		Text
	4		4		Subtitle		Subt
	5		5		O)/II		Dual
	6		6		[i+]/[≡i]		Info
	7		7		OK		Ok
	8		8		Up		Up
	9		9		Down		Down
	0		0		Right		Right
	Source		AV		Left		Left
	Mute		Mute		II/II>/[▼]		Pause
	Vol+		Vol +		Play/[≡o]		Play
	Vol-		Vol -		Stop		Stop
	Exit/Return		Exit		Eject		Eject





 








 
 

 



 



 

 
 
 
 
 








 

 


 



 
Original	Rechange
 I<</[≡?]	 I<<
 <</[≡+]	 <<
 >>/[≡◆]	 >>
 >>I/[O]/[≡X]	 >>I
AUDIO TEXT	 +  Shift + Dual

Original	Rechange





Original	Rechange	Original	Rechange
	Power		Power
	←[/]→		3D
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV
	ATV/DTV/Content Menu		Smart
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +

Original	Rechange	Original	Rechange
	P-		Ch -
	Mute		Mute
	Guide/Top		Guide
	Exit/Return		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu/DVD		Menu
	Tv/FAV/Radio/Set		TV/R
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text		Text
	[<>]		Format





Original	Recharge	Original	Recharge
 [i+]/[≡i]	 INFO Info		
 II/II>/[▼]	 II Pause		
 SUBTITLE Subtitle	 AD SUBT Subt		
 CD/I/II O)/II	 SOUND DUAL Dual		
 Play/[≡o]	 PLAY MODE Play		
 CD/I/II Stop	 ZOOM Stop		
 SUBTITLE Eject	 ZOOM Eject		
 I<</[≡?]	 I<< I<<		
 <</[≡+]	 I>> I>>		
 >>/[≡♦]	 I>> I>>		
 >>I/[O]/[≡X]	 I>> I>>		
 AUDIO Text Audio	 SHIFT + SOUND DUAL Shift + Dual		
 AD AD	 SHIFT + AD SUBT Shift + Subt		

