 


 
 



 
 


 
 

 

 


 
 





 



 

 



 

 

 

 
 


 
 




 


 















Original	Recharge	Original	Recharge
 Power	 Power	 DTV	 TV/R
 Source	 AV	 Vol+	 Vol +
 Subt.	 Subt	 Vol-	 Vol -
 1	 1	 Mute	 Mute
 2	 2	 PR+	 Ch +
 3	 3	 PR-	 Ch -
 4	 4	 CH.List	 List
 5	 5	 Menu	 Menu
 6	 6	 Media.P	 Media
 7	 7	 Guide	 Guide
 8	 8	 Tools	 Options
 9	 9	 Info	 Info
 0	 0	 Up	 Up
 -/--	 SHIFT + -/-- Shift + Guide	 Down	 Down
 PRE-CH	 Pre Ch	 Right	 Right
 TTX/MIX	 Text	 Left	 Left
 HDMI	 Smart	 Enter	 Ok





Original		Rechange		Original		Rechange	
	Return		Back		Pause		Pause
	Exit		Exit		>>		>>
	Red/A		Red				
	Green/B		Green				
	Yellow/C		Yellow				
	Blue/D		Blue				
	PIP		3D				
	PIP Down		I<<				
	PIP Up		>>I				
	P.Mode		Shift + Format				
	SRS		Dual				
	P.Size		Format				
	Still		D. Menu				
	Rec		Rec				
	Stop		Stop				
	<<		<<				
	Play		Play				

