












 


 














Original	Rechange
	 Power
	 Mute / Dimmer
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 << / Tune-
	 >> / Tune+
	 I<< / Preset-
	 >>I / Preset+
	 AD/Subt Subtitle / EQ
	 P.Size Zoom / Size
	 E-Manual D.Menu / Top
	 Tools OPT-TOOLS Setup / OPT /
	 TTX/MIX GOTO Text / Goto
	 SOURCE RDS AV / Input / RDS
	 MENU HOME Menu / Home
	 Up

Original	Rechange
	 Info / Angle
	 Left
	 OK
	 Right
	 EXIT CLEAR Exit / Cancel / Clear
	 Down
	 PRE-CH RETURN Back / Return
	 Vol+
	 CH LIST LIST Smart / List
	 PR+ CH+ / Page+
	 Vol-
	 MEDIA.P MEDIA Display / Media
	 PR- CH- / Page-
	 1
	 2
	 3
	 4





Original		Recharge	
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
GUIDE	Guide	GUIDE EPG	Guide / EPG / -/--
0	0	HDMI - SAT 0	0
A	Red/A	NETFLIX SEARCH	Red / Netflix / Search
B	Green/B	APP REPEAT	Green / APP / Repeat
C	Yellow/C	YouTube REPEAT A-B	Yellow / YouTube / Repeat
D	Blue/D	Prime Video RANDOM	Blue / Prime Video / Random
RETURN	Return	SHIFT + BACK	Shift + Back / Return

Original		Recharge	

