



 

 

 



 

 























Original	Rechange
	
Mute	Mute / Dimmer
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	

Original	Rechange
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	





Original		Recharge	
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
GUIDE	Guide	GUIDE EPG	Guide / EPG / -/--
0	0	HDMI - SAT 0	0
A	Red/A	NETFLIX SEARCH	Red / Netflix / Search
B	Green/B	APP REPEAT	Green / APP / Repeat
C	Yellow/C	YouTube REPEAT A-B	Yellow / YouTube / Repeat
D	Blue/D	Prime Video RANDOM	Blue / Prime Video / Random
RETURN	Return	SHIFT + BACK	Shift + Back / Return

Original		Recharge	

