

 









 
 
 
 
 
 



 

 
 

 

 
 




 
 
 
 
 


 


 
 





 
 






 




 


 




Original	Rechange	Original	Rechange
 Power	 Power	 Guide	 Guide
 [≡_]/Source	 AV	 Vol+	 Vol +
 1	 1	 Vol-	 Vol -
 2	 2	 Mute	 Mute
 3	 3	 P+	 Ch +
 4	 4	 P-	 Ch -
 5	 5	 [≡i]/Menu	 Menu
 6	 6	 [≡x]/Exit	 Exit
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 -/--	 Shift + Guide	 Enter	 Ok
 [≡o]/PRE-CH	 Pre Ch	 Return	 Back
 Tv/DTV	 TV/R	 [≡?]/Info	 Info
 CH.List	 List	 [≡]/[≡]/TTX/MIX	 Text
 D.Menu	 D. Menu	 Red	 Red

Original	Rechange	Original	Rechange
 MUTE	 MUTE	 TV	 DVD
 TV	 DVD	 SAT	 AUX
 DUAL	 SUBT	 PLAY MODE	 REC MODE
 SOUND	 AD	 DISC NAV	 SETTINGS
 PICTURE	 ECO	 LIST	 OPT
 FORMAT	 3D	 PROG	 SEARCH
 TIMER	 AV	 SLEEP	 TV/R
 D.MENU	 TEXT	 E-MANUAL	 REPEAT
 MENU	 INFO	 REPEAT	 TEXT
 OK	 BACK	 CLEAR	 EXIT
 UP	 DOWN	 HOME	 SMART
DOWN	RIGHT	APP	MEDIA
RIGHT	LEFT	VOL+	CH+
LEFT	ENTER	VOL-	CH-
ENTER	OK	1	2
RETURN	BACK	3	5
INFO	INFO	4	6
TTX/MIX	TEXT	7	8
Red	A	8	9
		9	FAV
		GUIDE	PRE-CH
		A	PRE-CH





Original	Recharge
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 M/B/P.Mode	 Options
 [≡◆]/S.Mode	 Shift + Dual
 [≡+]/P.Size	 Format
 [≡◆]/Auto	 Smart
 I-II/Dual	 Dual
 Subtitle	 Subt
 Source Green	 Shift + AV
 PIP	 3D

Original	Recharge

