



| Original | | Rechange | | Original | | Rechange | |
|----------|--------|----------|----------------------------|----------|--------|----------|--------------------------|
| | Power | | Power | | FAV- | + | Shift + CH- / |
| | Mute | | Mute / Dimmer | | CH+ | | CH+ / Page+ |
| | 1 | | 1 | | P.Mode | | Picture / Format |
| | 2 | | 2 | | Vol+ | | Vol+ |
| | 3 | | 3 | | CH- | | CH- / Page- |
| | 4 | | 4 | | S.Mode | | Sound / Title |
| | 5 | | 5 | | Vol- | | Vol- |
| | 6 | | 6 | | Source | | AV / Input / RDS |
| | 7 | | 7 | | Sleep | | Sleep / Timer |
| | 8 | | 8 | | Aspect | + | Shift + Picture / Format |
| | 9 | | 9 | | Info | | Info / Angle |
| | -/-- | + | Shift + Guide / EPG / -/-- | | Up | | Up |
| | 0 | | 0 | | Left | | Left |
| | Recall | | Back / Return | | OK | | OK |
| | Audio | | Audio / Lang I/II | | Right | | Right |
| | FAV+ | + | Shift + CH+ / | | Menu | | Menu / Home |
| | FAV | | Fav / Marker / PC | | Down | | Down |





| Original | Recharge |
|-------------|------------------------|
| Exit | Exit / Cancel / Clear |
| Text | Text / Goto |
| Index | Display / Media |
| Play/Mix | Play / Slow |
| Pause | Pause / Step / Freeze |
| Stop/Reveal | Stop / Hold |
| <</Hold | << / Tune- |
| <</Hold | + Shift + Stop / |
| >>/Subpage | >> / Tune+ |
| Size | Zoom / Size |
| I<< | I<< / Preset- |
| >>I/Cancel | >>I / Preset+ |
| T-Shift | Smart / List |
| Tv/Radio | TV/Radio / |
| Rec | Rec / Rec Mode |
| EPG | Guide / EPG / -/-- |
| Red | Red / Netflix / Search |

| Original | Recharge |
|----------|-----------------------------|
| Green | Green / APP / Repeat |
| Yellow | Yellow / YouTube / Repeat |
| Blue | Blue / Prime Video / Random |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

