

 
 

 



 
 
 

 

 






 
 


 
 
 

 
 


 

 



 
 


 
 










 

 
 


 
 


 
 




Original		Rechange		Original		Rechange	
	Power		Power		9		9
	PRO/TV/TXT		Text		0		0
	Goto/Cancel		3D		FAV		Pre Ch
	REP/Reveal		Options		Recall		Back
	Input		AV		Vol+		Vol +
	<</Hold		<<		Vol-		Vol -
	>>/Size		>>		CH+		Ch +
	<</Subpage		<<		CH-		Ch -
	>> /Index		>>		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		OK		Ok
	5		5		Menu		Menu
	6		6		Exit		Exit
	7		7		EPG		Guide
	8		8		Info		Info





	Original	Rechange	Original	Rechange
	Mute			
	Picture			
	Sound			
	Eco/TFT Off			
	Subtitle			
	D.Set/CH List			
	D.Menu/Play List			
	Audio			
	Pause/TS			
	Play			
	Stop			
	Record			
	Eject			
	Red			
	Green			
	Yellow			
	Blue/Sleep			

