



Original		Rechange		Original		Rechange	
	Power		Power		S.Mode		Shift + Dual
	Mute		Mute		Source		AV
	1		1		CH+		Ch +
	2		2		CH-		Ch -
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		OK		Ok
	8		8		Exit		Exit
	9		9		Menu		Menu
	0		0		Rec		Rec
	CH.List		List		Timeshift		Options
	Recall		Pre Ch		Timer		Shift + AV
	Vol+		Vol +		Rec.List		Media
	Vol-		Vol -		Red		Red
	PIC.Mode		Shift + Format		Green		Green





Original		Rechange		Original		Rechange	
	Yellow		Yellow		>>		>>
	Blue		Blue				
	Aspect		Format				
	Tv/Radio		TV/R				
	Sleep		Sleep				
	Subtitle		Subt				
	Index		Guide				
	Reveal		D. Menu				
	Audio		Dual				
	Display		Info				
	Text		Text				
	Play/Size		Play				
	Pause/Subpage		Pause				
	Stop/Hold		Stop				
	I<<		I<<				
	>>I		>>I				
	<<		<<				

