



Original	Rechange
Power	Power
TV/RAD	TV/Radio /
Input	AV / Input / RDS
AV Mode	Picture / Format
Energy Saving	Eject / Surround
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
List	Smart / List
0	0
Q.View	Display / Media

Original	Rechange
Vol+	Vol+
Mute	Mute / Dimmer
PR+/Page Up	CH+ / Page+
Vol-	Vol-
PR-/Page Down	CH- / Page-
Up	Up
Left	Left
OK	OK
Right	Right
Menu	Menu / Home
Down	Down
Return	Back / Return
Red	Red / Netflix / Search
Green/Stop	Green / APP / Repeat
Green/Stop	Stop / Hold
Yellow/Play	Yellow / YouTube / Repeat
Yellow/Play	Play / Slow





Original	Recharge	Original	Recharge
 Blue/Pause	 Blue / Prime Video / Random		
 Blue/Pause	 Pause / Step / Freeze		
 Text/[≡]	 Text / Goto		
 T.OPT/;<<<	 I;<< / Preset-		
 T.OPT/;<<<	 Setup / OPT /		
 T.OPT/;<<<	 <<< / Tune-		
 Subtitle/>>>	 >>>I / Preset+		
 Subtitle/>>>	 Subtitle / EQ		
 Subtitle/>>>	 >>> / Tune+		
 Simplink	 Sleep / Timer		
 Q.Menu	 D.Menu / Top		
 Info	 Info / Angle		
 Guide	 Guide / EPG / -/--		
 FAV/Mark	 Fav / Marker / PC		

Original	Recharge

