




Original	Recharge	Original	Recharge
 Power	 Power	 Vol+	 Vol+
 Portal/Energy Saving	 Sleep / Timer	 Fav	 Fav / Marker / PC
 []/Ratio	 Picture / Format	 PR+/Page Up	 CH+ / Page+
 Input	 AV / Input / RDS	 Vol-	 Vol-
 TV	 TV/Radio /	 3D	 Zoom / Size
 1	 1	 PR-/Page Down	 CH- / Page-
 2	 2	 Mute	 Mute / Dimmer
 3	 3	 Settings	 Setup / OPT /
 4	 4	 Info/Home	 Info / Angle
 5	 5	 Q.Menu/3D	 Menu / Home
 6	 6	 Up	 Up
 7	 7	 Left	 Left
 8	 8	 OK	 OK
 9	 9	 Right	 Right
 List	 Smart / List	 Down	 Down
 0	 0	 Back	 Back / Return
 Q.View	 D.Menu / Top	 Guide	 Guide / EPG / -/-

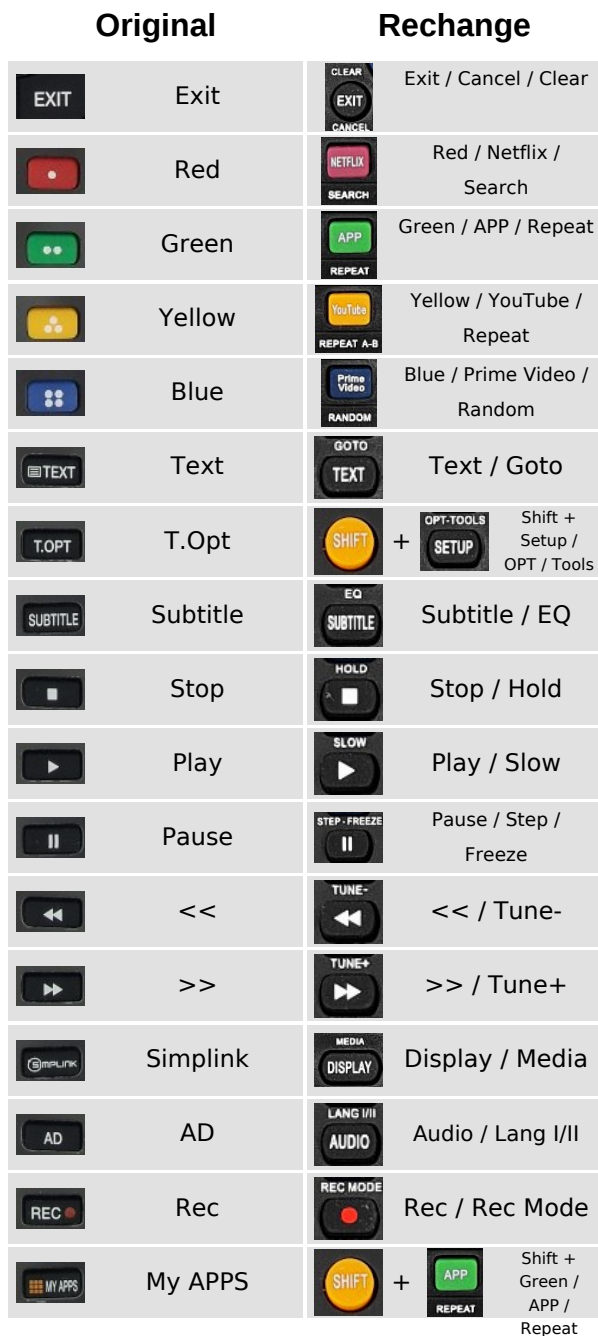



The image shows a black remote control for a Mandis TV. The remote has a variety of buttons, including a power button at the top left, a dimmer/mute button at the top center, and a shift button at the top right. Below these are buttons for TV, DVD, SAT, and AUX. The central part of the remote features a directional pad with an 'OK' button in the center. Below the directional pad are buttons for CLEAR, EXIT, CANCEL, LIST, SMART, MEDIA, and DISPLAY. The bottom section of the remote includes a numeric keypad (0-9) and buttons for VIDEO, TAPE, TUNER, AUX-HDD, USB, BLUETOOTH, HDMI-SAT, PC, GUIDE, EPG, FAV, and MARKER. The brand name 'Mandis' is printed in a large, stylized font across the middle of the remote. At the bottom, there is a logo for 'Mandis shop' and the website address 'www.mandis.tv'.

Power **DIMMER MUTE** **SHIFT**

TV **DVD** **SAT** **AUX**

SLOW **STEP-FREEZE** **HOLD** **REC MODE**

PLAY **PAUSE** **STOP** **RECORD**

TUNE- **TUNE+** **PRESET-** **PRESET+**

LEFT **RIGHT** **LEFT** **RIGHT**

TITLE **LANG VII** **EQ** **SURROUND**

SOUND **AUDIO** **SUBTITLE** **UP**

FORMAT **SIZE** **TIMER** **PROGRAM**

PICTURE **ZOOM** **SLEEP** **TV/ RADIO**

TOP MENU **OPT-TOOLS** **GOTO** **RDS**

D.MENU **SETUP** **TEXT** **AV INPUT**

HOME **ANGLE**

MENU **INFO**

UP **OK** **DOWN**

LEFT **RIGHT**

CLEAR **RETURN**

EXIT **BACK**

CANCEL **LIST**

+ **SMART** **+**

VOL **MEDIA** **CH**

- **DISPLAY** **-**

TV **DVD** **CD- STB**

1 **2** **3**

VIDEO **TAPE** **TUNER**

4 **5** **6**

AUX- HDD **USB** **BLUETOOTH**

7 **8** **9**

FM **HDMI- SAT** **PC**

GUIDE **0** **FAV**

EPG **MARKER**

NETFLIX **APP** **YouTube** **Prime Video**

SEARCH **REPEAT** **REPEAT A-B** **RANDOM**

Mandis

Mandis shop

www.mandis.tv