



Original		Rechange		Original		Rechange	
	Power		Power		Menu		Menu / Home
	Mute		Mute / Dimmer		Up		Up
	Play		Play / Slow		i		Info / Angle
	Pause		Pause / Step / Freeze		Left		Left
	Stop		Stop / Hold		OK		OK
	Rec		Rec / Rec Mode		Right		Right
	<<		<< / Tune-		Exit		Exit / Cancel / Clear
	>>		>> / Tune+		Down		Down
	Lang		Audio / Lang I/II		Back		Back / Return
	Source (Games)		Eject / Surround		Vol+		Vol+
	Movie-Music-Phot		Picture / Format		World (Violet)		Smart / List
	[≡]..		Zoom / Size		CH+ / Page+		CH+ / Page+
	*/O		Sleep / Timer		Vol-		Vol-
	TV		TV/Radio /		*/Q		Display / Media
	Q.Menu		D.Menu / Top		PR-		CH- / Page-
	[-O-]		Setup / OPT /		1		1
	[≡]/Text		Text / Goto		2		2





Original	Recharge	Original	Recharge
 3 def	3	 3	3
 4 ghi	4	 4	4
 5 jkl	5	 5	5
 6 mno	6	 6	6
 7 pqrs	7	 7	7
 8 tuv	8	 8	8
 9 wxyz	9	 9	9
 Guide	Guide	 Guide / EPG / -/--	
 0	0	 0	0
 Red	Red	 Red / Netflix / Search	
 Green	Green	 Green / APP / Repeat	
 Yellow	Yellow	 Yellow / YouTube / Repeat	
 Blue	Blue	 Blue / Prime Video / Random	
 Recall	Shift + Back / Return	 Shift + Back / Return	

