



| Original | Rechange |
|---|---|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  Play |  Play / Slow |
|  Pause |  Pause / Step / Freeze |
|  Stop |  Stop / Hold |
|  Rec |  Rec / Rec Mode |
|  << |  << / Tune- |
|  >> |  >> / Tune+ |
|  Lang |  Audio / Lang I/II |
|  Source (Games) |  Eject / Surround |
|  Movie-Music-Phot |  Picture / Format |
|  [≡].. |  Zoom / Size |
|  */O |  Sleep / Timer |
|  TV |  TV/Radio / |
|  Q.Menu |  D.Menu / Top |
|  [-O-] |  Setup / OPT / |
|  [≡]/Text |  Text / Goto |

| Original | Rechange |
|---|---|
|  Menu |  Menu / Home |
|  Up |  Up |
|  i |  Info / Angle |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  EXIT |  Exit / Cancel / Clear |
|  Down |  Down |
|  BACK |  Back / Return |
|  Vol+ |  Vol+ |
|  World (Violet) |  Smart / List |
|  PR+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  */Q |  Display / Media |
|  P |  CH- / Page- |
|  1./@ |  1 |
|  2abc |  2 |





| Original | Recharge | Original | Recharge |
|----------|-----------------------------|----------|----------|
| 3 def 3 | 3 3 | | |
| 4 ghi 4 | 4 4 | | |
| 5 jkl 5 | 5 5 | | |
| 6 mno 6 | 6 6 | | |
| 7 pqrs 7 | 7 7 | | |
| 8 tuv 8 | 8 8 | | |
| 9 wxyz 9 | 9 9 | | |
| Guide | Guide / EPG / -/-- | | |
| 0 | 0 | | |
| Red | Red / Netflix / Search | | |
| Green | Green / APP / Repeat | | |
| Yellow | Yellow / YouTube / Repeat | | |
| Blue | Blue / Prime Video / Random | | |
| Recall | Shift + Back / Return | | |
| | | | |
| | | | |
| | | | |
| | | | |

| Original | Recharge |
|----------|----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

