



Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <<<	 <<< / Tune-
 >>>	 >>> / Tune+
 LANG.	 Audio / Lang I/II
 Source (Games)	 Eject / Surround
 Movie-Music-Phot	 Picture / Format
 [≡]..	 Zoom / Size
 * / O	 Sleep / Timer
 TV	 TV/Radio /
 Q.Menu	 D.Menu / Top
 [-O-]	 Setup / OPT /
 [≡]/Text	 Text / Goto

Original	Rechange
 Menu	 Menu / Home
 Up	 Up
 i	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 EXIT	 Exit / Cancel / Clear
 Down	 Down
 BACK	 Back / Return
 + v	 Vol+
 World (Violet)	 Smart / List
 + P	 CH+ / Page+
 v -	 Vol-
 ★ / Q	 Display / Media
 P -	 CH- / Page-
 1./@	 1
 2 abc	 2





Original		Recharge	
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Guide		Guide / EPG / -/--
	0		0
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Recall		Shift + Back / Return

Original		Recharge	

