


 
 


	Original	Rechange	Original	Rechange
	 Power	 Power	 Exit	 Exit
	 Mute	 Mute	 Up	 Up
	 1	 1	 Down	 Down
	 2	 2	 Right	 Right
	 3	 3	 Left	 Left
	 4	 4	 OK	 Ok
	 5	 5	 Vol+	 Vol +
	 6	 6	 Vol-	 Vol -
	 7	 7	 Sound	 Shift + Dual
	 8	 8	 PIC	 Options
	 9	 9	 CH+	 Ch +
	 0	 0	 CH-	 Ch -
	 Audio	 Dual	 Sleep	 Sleep
	 Recall	 Back	 Aspect	 3D
	 Tv-Menu	 Menu	 Freeze	 Shift + Media
	 Source	 AV	 Tv/Radio	 TV/R
	 CH.List	 List	 Text	 Text





Original	Recharge
 EPG	 Guide
 FAV	 Pre Ch
 Info	 Info
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Reveal	 Eject
 Hold	 D. Menu
 List	 Smart
 Index	 Shift + Info
 Subpage	 Shift + Subt
 Size	 Format
 MIX	 Media
 Subtitle	 Subt
 <<	 <<
 >>	 >>

Original	Recharge
 I<<	 I<<
 >>I	 >>I
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 Rec/Rep	 Rec

