 




 
 

 






Original	Recharge	Original	Recharge
	 Power		 Media
	 Mute		 Ok
	 Smart		 Up
	 Options		 Down
	 Text		 Right
	 Subt		 Left
	 AV		 Vol +
	 Dual		 Vol -
	 Guide		 Ch +
	 TV/R		 Ch -
	 Red		 Format
	 Green		 Pre Ch
	 Yellow		 Back
	 Blue		 Pause
	 3D		 Shift + AV
	 Info		 Shift + Format
	 Menu		 D. Menu





Original		Rechange		Original		Rechange	
	Zoom		Eject				
	S/M/D		Shift + Text				
	PC		>>				
	TV		<<				
	DVI		I<<				
	YPbPr		>>I				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				

