 

 

 
 


 

 


 
 


 
 
 

 
 

 
 
 
 
 

 

 



 



 
 


 
 



 
 

 
 
 
 
 
 




 



 
 




Original		Rechange		Original		Rechange	
	Power		Power		Mute		Mute
	Netflix		Media		P+		Ch +
	Source		AV		P-		Ch -
	1		1		Internet		Smart
	2		2		Menu		Menu
	3		3		Q.Menu		D. Menu
	4		4		Back		Back
	5		5		Exit		Exit
	6		6		Up		Up
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0		0		OK		Ok
	TV		TV/R		i		Info
	↔		Pre Ch		EPG		Guide
	Vol+		Vol +		[>]		List
	Vol-		Vol -		*/0		Format





Original	Rechange	Original	Rechange
*/Q	3D		
TXT	Text		
Red	Red		
Green	Green		
Yellow	Yellow		
Blue	Blue		
Lang	Dual		
Subt.	Subt		
←[+]→	Eject		
<<	<<		
>>	>>		
Pause	Pause		
Rec	Rec		
Play	Play		
Stop	Stop		

