



 



 

 

 


 




 

 















 











 



 



 



 





 





 





 
 

 
 
 

 
 

 
 







Original		Rechange		Original		Rechange	
	Power		Power		Input		AV / Input / RDS
	ATV/DTV		Smart / List		Digital Menu		D.Menu / Top
	Tv/DVD		Display / Media		DVD Menu		Menu / Home
	Eject		Eject / Surround		Top Menu		Shift + D.Menu / Top Menu
	1		1		Guide		Guide / EPG / -/-
	2		2		CH+		CH+ / Page+
	3		3		CH-		CH- / Page-
	4		4		Vol+		Vol+
	5		5		Vol-		Vol-
	6		6		Up		Up
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0		0		Enter/CH List		OK
	Info		Info / Angle		Menu/Setup		Setup / OPT /
	Mute		Mute / Dimmer		Exit/Cancel		Exit / Cancel / Clear
	Tv/Radio		TV/Radio /		Return		Back / Return





Original	Recharge	Original	Recharge
 Play	 Play / Slow	 Jump	 Sound / Title
 Stop	 Stop / Hold	 PIC Size	 Picture / Format
 I<<	 I<< / Preset-	 Sleep	 Sleep / Timer
 <</REV	 << / Tune-		
 >>/FF	 >> / Tune+		
 >>I	 >>I / Preset+		
 Red/<I	 Red / Netflix / Search		
 Green/Pause	 Green / APP / Repeat		
 Yellow/Play Mode	 Yellow / YouTube / Repeat		
 Blue/I>	 Blue / Prime Video / Random		
 Marker	 Fav / Marker / PC		
 Angle	 Shift + Info / Angle		
 Repeat A-B	 Shift + Yellow / YouTube / Repeat A-B		
 Text	 Text / Goto		
 Subtitle	 Subtitle / EQ		
 Audio Select	 Audio / Lang I/II		
 Zoom/CH RTN	 Zoom / Size		

