



























 









Original	Recharge
 Power	 Power
 Top Menu	 Shift + D.Menu / Top Menu
 DVD Menu	 D.Menu / Top
 Tv/DVD	 TV/Radio /
 Open/Close	 Eject / Surround
 [▼]	 Shift + Down
 O)I/II	 Display / Media
 Subtitle	 Subtitle / EQ
 Text/Angle	 Text / Goto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Recharge
 9	 9
 AD	 Audio / Lang I/II
 0	 0
 ATV/DTV	 Shift + AV / Input / RDS
 Guide	 Guide / EPG / -/-
 Input	 AV / Input / RDS
 Menu	 Menu / Home
 Quick	 Shift + Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Jump	 Smart / List
 Return	 Back / Return
 Setup	 Setup / OPT /





Original	Recharge
 P+	 CH+ / Page+
 [≡i]/[≡+]	 Info / Angle
 Vol+	 Vol+
 P-	 CH- / Page-
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Pause	 Pause / Step / Freeze
 <</[≡?]	 << / Preset-
 >> /[O]/[≡x]	 >> / Preset+
 <</[≡+]	 << / Tune-
 Play	 Play / Slow
 Stop	 Stop / Hold
 >>/[≡◇]	 >> / Tune+
 Red/Zoom	 Red / Netflix / Search
 Green/Repeat	 Green / APP / Repeat
 Yellow/Root	 Yellow / YouTube / Repeat
 Blue/Title	 Blue / Prime Video / Random

Original	Recharge

