
 

 
 





| Original | Rechange |
|--|--|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  Nicam/A2 |  Shift + Audio / Lang I/II |
|  Aspect |  Shift + Picture / Format |
|  P.Mode |  Picture / Format |
|  S.Mode |  Sound / Title |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  -/-- |  Shift + Guide / EPG / -/-- |
|  0 |  0 |

| Original | Rechange |
|--|---|
|  Recall |  Back / Return |
|  Display |  Display / Media |
|  Freeze |  Pause / Step / Freeze |
|  Rec/Auto |  Rec / Rec Mode |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  Sleep |  Sleep / Timer |
|  Up |  Up |
|  Source |  AV / Input / RDS |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Down |  Down |
|  Menu |  Menu / Home |
|  Exit |  Exit / Cancel / Clear |





| Original | Recharge |
|-----------------|-------------------|
| CH+ / Page+ | CH+ / Page+ |
| Subtitle | Subtitle / EQ |
| Vol+ | Vol+ |
| CH- / Page- | CH- / Page- |
| T.Shift | Setup / OPT / |
| Vol- | Vol- |
| Play/Pause/Hold | Play / Slow |
| Play/Pause/Hold | Shift + Stop / |
| <</Reveal | << / Tune- |
| >>/Size | Zoom / Size |
| >>/Size | >> / Tune+ |
| Stop/Index | Stop / Hold |
| I<< | I<< / Preset- |
| S.Page/>>I | >>I / Preset+ |
| Text | Text / Goto |
| FAV | Fav / Marker / PC |
| Audio | Audio / Lang I/II |

| Original | Recharge |
|----------|-------------------|
| DTV | Smart / List |
| EPG | Guide / EPG / -/- |
| Tv/Radio | TV/Radio / |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

