 



 
 

 

 
 

 






 


 
 

 

 




Original	Recharge	Original	Recharge
 Power	 Power	 Right	 Right
 LIB	 List	 Left	 Left
 Mute	 Mute	 PR+	 Ch +
 <<	 <<	 PR-	 Ch -
 Play	 Play	 VOL+	 Vol +
 >>	 >>	 VOL-	 Vol -
 Rec	 Rec	 Red	 Red
 Pause	 Pause	 Green	 Green
 Stop	 Stop	 Yellow	 Yellow
 Timers	 Sleep	 Blue	 Blue
 Guide	 Guide	 1	 1
 Back	 Back	 2	 2
 Text	 Text	 3	 3
 Info	 Info	 4	 4
 OK	 Ok	 5	 5
 Up	 Up	 6	 6
 Down	 Down	 7	 7





Original		Rechange	
	8		8
	9		9
	0		0
	AUX		AV
	P<P		Pre Ch
	Menu		Menu
	SUBT.		Subt
	FAV.		Shift + Pre Ch
	PIP-		Media
	PIP		3D
	WIDE		Format
	PIP+		Smart
	Swap		Options

Original		Rechange	

