



Original		Rechange		Original		Rechange	
	Power		Power		7		7
	Screen		Picture / Format		8		8
	Lang		Audio / Lang I/II		[≡]/Text		Text / Goto
	Subtitle		Subtitle / EQ		9		9
	www		Smart / List		0		0
	Red/▲		Red / Netflix / Search		Recall		Back / Return
	Red/▲		Shift + CH+ /		Up		Up
	Green/▼		Green / APP / Repeat		Menu		Menu / Home
	Green/▼		Shift + CH- /		Left		Left
	Yellow		Yellow / YouTube / Repeat		Right		Right
	Blue		Blue / Prime Video / Random		Return		Shift + Back / Return
	1		1		Down		Down
	2		2		OK		OK
	3		3		Source		AV / Input / RDS
	4		4		FAV		Fav / Marker / PC
	5		5		Presets		Setup / OPT /
	6		6		Sleep		Sleep / Timer





Original		Recharge		Original		Recharge	
V+	Vol+	+ VOL	Vol+				
P+	P+	+ CH PAGE	CH+ / Page+				
INFO	Info	ANGLE INFO	Info / Angle				
MUTE	Mute	DIMMER MUTE	Mute / Dimmer				
EPG	EPG	GUIDE EPG	Guide / EPG / -/--				
V-	Vol-	VOL -	Vol-				
P-	P-	CH PAGE -	CH- / Page-				

