 


 




 


 








 

 
 

 





 
 

 





 





Original	Rechange	Original	Rechange
 Power	 Power	 [=]	 REPEAT TEXT Text
 Mute	 MUTE Mute	 GUIDE Guide	 GUIDE Guide
 V.Format	 PICTURE FORMAT Format	 EXIT Exit	 CLEAR EXIT Exit
 Sleep	 PROG SLEEP Sleep	 Up	 Up
 FAV	 FAV PRE-CH Pre Ch	 Down	 Down
 Tv/♪	 SEARCH TV/R TV/R	 Right	 Right
 AV	 TIMER AV AV	 Left	 Left
 SAT	 APP MEDIA Media	 OK OK	 OK Ok
 Zoom	 ZOOM Eject	 ↑	 SHIFT + Up Shift + Up
 Camera	 HOME SMART Smart	 ↓	 SHIFT + Down Shift + Down
 Vol+	 + Vol +	 Red	 A Red
 Vol-	 VOL Vol -	 Green	 B Green
 CH+	 + CH Ch +	 Yellow/Audio	 C Yellow
 CH-	 CH Ch -	 Blue/[...]	 D Blue
 Info	 DISPLAY INFO Info	 1	 1 1
 Back	 RETURN BACK Back	 2	 2 2
 Menu	 TOP MENU MENU Menu	 3	 3 3





Original		Rechange		Original		Rechange	
	4		4		>		Dual
	5		5		> <		3D
	6		6		[]		List
	7		7		[->]		D. Menu
	8		8				
	9		9				
	0		0				
	≡>		Options				
	V		Subt				
	Play		Play				
	Stop		Stop				
	Pause		Pause				
	Rec		Rec				
	<<		<<				
	>>		>>				
	<<		<<				
	>>		>>				

