



Original		Rechange		Original		Rechange	
	Power		Power		CH+		Ch +
	Source		AV		CH-		Ch -
	Sleep		Sleep		Down		Down
	Mute		Mute		Right		Right
	1		1		Left		Left
	2		2		Vol-		Vol -
	3		3		Vol+		Vol +
	4		4		Enter		Ok
	5		5		Red		Red
	6		6		Green		Green
	7		7		Yellow		Yellow
	8		8		Blue		Blue
	9		9		Info		Info
	0		0		EPG		Guide
	-/--		Shift + GUIDE		Menu		Menu
	Recall		Pre Ch		Nicam		Media
	Up		Up		FAV+		>>





Original	Recharge
FAV-	<<
TXT	Text
Edit/Group	Options
Index	Back
Lang/Audio	Dual
TV/Radio	TV/R
Subtitle	Subt
Subpage	Shift + Subt
Size	Format
Hold	3D
Still	Exit
P.Mode	Shift + Format
S.Mode	Shift + Dual

Original	Recharge

