

 
 

 
 
 
 
 

 



 

 
 

 
 
 
 
 

 
 
 
 
 
 
 

 
 
 

 
 
 



 





 
 
 



 




	Original	Recharge		Original	Recharge
	Power		Power		Play/Pause
	OK		Ok		Play
	Up		Up		I<<
	Down		Down		Home
	Right		Right		Smart
	>>		>>		1
	Left		Left		2
	<<		<<		3
	Back		Back		4
	Options		Options		5
	Disc		Menu		6
	Open/Close		Eject		7
	Mute		Mute		8
	Vol+		Vol +		9
	Vol-		Vol -		0
	Stop		Stop		Sound
	>I		>>I		Surr
					Dual
					Source/Audio
					Radio
					Subt
					AV
					TV/R



