



Original	Rechange
 Power	 Power
 Mute	 Mute
 Input	 AV
 Menu	 Menu
 Exit	 Exit
 16:9/4:3	 3D
 Info	 Info
 Sound	 Dual
 Picture	 Shift + Format
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Rechange
 9	 9
 0	 0
 FAV	 Shift + Pre Ch
 Recall	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Subtitle	 Subt
 Repeat	 Shift + Text
 Goto	 Options
 Audio	 TV/R





Original	Recharge	Original	Recharge
 EPG	 Guide	 Red	 Red
 ECO/TFT Off	 Smart		
 Play List	 Media		
 CH List	 List		
 Record	 Rec		
 Stop	 Stop		
 Pause/TS	 Pause		
 Play	 Play		
 <<	 <<		
 TV/TXT	 Text		
 >>/Hold	 >>		
 I<<	 I<<		
 Size	 Format		
 >>I/Subpage	 >>I		
 Blue/Sleep	 Blue		
 Yellow	 Yellow		
 Green	 Green		

