


 

 





 



 



 




 


 
 


 
 
 

 
 



 

 
 
 
 
 

 

 

 



 
 


 


 
 


 


 



 

 

 
 





 
 
 
 





 
 
 




 

 






Original		Rechange		Original		Rechange	
	Power		Power		i		Info
	Mute		Mute		Timer		Shift + AV
	AUX		AV		[...]		Subt
	Tv/Radio		TV/R		[≡]/Text		Text
	A/R		Pre Ch		Audio?		Dual
	V-Format		Format		Menu		Menu
	1		1		Guide		Guide
	2		2		Exit		Exit
	3		3		List		List
	4		4		OK/List		Ok
	5		5		Up		Up
	6		6		Down		Down
	7		7		Right		Right
	8		8		Left		Left
	9		9		Vol+		Vol +
	0		0		Vol-		Vol -
	Recall		Sleep		P+		Ch +





Original		Rechange		Original		Rechange	
	P-		Ch -		>		Smart
	Red/F1		Red		<		I<<
	Green/F2/[I]		Green				
	Yellow/F3/[î]		Yellow				
	Blue/F4		Blue				
	FAV		Shift + Pre Ch				
	[*]		Eject				
	Play		Play				
	Pause		Pause				
	>>		>>				
	<<		<<				
	Rec		Rec				
	Stop		Stop				
	>		>>				
	[.≡]		D. Menu				
	> <		Shift + Eject				
	SAT		Shift + Guide				

