



Original	Recharge	Original	Recharge
Standby	Power	Pause	Pause / Step / Freeze
Open/Close	Eject / Surround	>>	>> / Preset+
Standby Tv	Shift + Power	<<	<< / Tune-
1	1	Stop	Stop / Hold
2	2	Play	Play / Slow
3	3	>>	>> / Tune+
4	4	Tv Vol+	Vol+
5	5	Tv Mute	Mute / Dimmer
6	6	Tv Prog+	CH+ / Page+
7	7	Tv Vol-	Vol-
8	8	Tv Prog-	CH- / Page-
9	9	Menu	Menu / Home
Cancel	Shift + Exit / Cancel / Clear	Return	Back / Return
0	0	Up	Up
Tv Input Sel.	AV / Input / RDS	Left	Left
I<<	I<< / Preset-	OK	OK
Slow	Shift + Play / Slow	Right	Right





Original		Recharge		Original	Recharge
	Down		Down		
	Disc Menu		D.Menu / Top		
	Info		Info / Angle		
	Exit		Exit / Cancel / Clear		
	PopUp Menu/Title Menu		Sound / Title		
	PopUp Menu/Title Menu		Smart / List		
	PopUp Menu/Title Menu	+	Shift + D.Menu / Top Menu		
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		
	Audio		Audio / Lang I/II		
	Subtitle		Subtitle / EQ		
	Repeat	+	Shift + Green / APP /		
	A-B Repeat	+	Shift + Yellow / YouTube /		
	Marker		Fav / Marker / PC		
	Bonusview		Display / Media		

