





































Original	Rechange
 Power	 Power
 Auto	 Smart / List
 Mute	 Mute / Dimmer
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 I/II/Audio	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0

Original	Rechange
 Back	 Back / Return
 Sleep	 Sleep / Timer
 Aspect	 Shift + Picture / Format
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Red/Eject	 Eject / Surround
 Red/Eject	 Red / Netflix / Search
 Green/D.Menu	 D.Menu / Top
 Green/D.Menu	 Green / APP / Repeat
 Yellow/Setup	 Yellow / YouTube / Repeat
 Yellow/Setup	 Setup / OPT /
 Blue/D.Disp	 Blue / Prime Video / Random
 Display	 Display / Media





Original	Recharge
Exit	Exit / Cancel / Clear
Menu	Menu / Home
Vol+	Vol+
Media	+ Shift + Display / Media
CH+	CH+ / Page+
Vol-	Vol-
Rec	Rec / Rec Mode
CH-	CH- / Page-
EPG	Guide / EPG / -/--
FAV	Fav / Marker / PC
Subtitle	Subtitle / EQ
Tv/Radio	TV/Radio /
Play	Play / Slow
Text	Text / Goto
Stop/Index	Stop / Hold
A-B	+ Shift + Yellow / YouTube /
<</Hold	+ Shift + Stop /

Hold

Original	Recharge
<</Hold	<< / Tune-
>>/Subpage	>> / Tune+
Repeat/Repeat	+ Shift + Green / APP /
I<</Size	Zoom / Size
I<</Size	I<< / Preset-
>>I/Cancel	+ Shift + Exit / Cancel / Clear
>>I/Cancel	>>I / Preset+

