 

 

 

 





 











 









 



 

 

 

 



 



 

 



 



 

 



 



 




 











 



 







 

 










Original		Rechange		Original		Rechange	
	Power		Power		Recall		Fav / Marker / PC
	Source		AV / Input / RDS		[i+]		Info / Angle
	TV		Shift + 1		AD		Sound / Title
	[<>]		Picture / Format		Vol+		Vol+
	3D		Shift + 3		Vol-		Vol-
	O)I/II		Audio / Lang I/II		Mute		Mute / Dimmer
	Subtitle		Subtitle / EQ		P+		CH+ / Page+
	1		1		P-		CH- / Page-
	2		2		Text		Text / Goto
	3		3		Quick		Display / Media
	4		4		List		Smart / List
	5		5		Menu		Menu / Home
	6		6		Guide		Guide / EPG / -/-
	7		7		[.]		D.Menu / Top
	8		8		[>]		Setup / OPT /
	9		9		Exit		Exit / Cancel / Clear
	0		0		Up		Up





Original	Recharge	Original	Recharge
 Down	 Down	 Blue	 Blue / Prime Video / Random
 Right	 Right	 >>/[≡◇]	 >> / Tune+
 Left	 Left	 <</[≡?]	 << / Preset-
 Back	 Back / Return	 >> /[O]/[≡x]	 >> / Preset+
 OK	 OK	 [▼]	 TV/Radio /
 >>	 SHIFT +  Shift + Right		
 Play	 SLOW Play / Slow		
 <<	 SHIFT +  Shift + Left		
 Stop	 HOLD Stop / Hold		
 Pause/Step	 STEP·FREEZE Pause / Step / Freeze		
 ↑↑	 SHIFT +  Shift + Up		
 ↓↓	 SHIFT +  Shift + Down		
 Rec	 REC MODE Rec / Rec Mode		
 Red	 NETFLIX Red / Netflix / Search		
 Green	 APP Green / APP / Repeat		
 Yellow	 YouTube Yellow / YouTube / Repeat		
 <</[≡+]	 TUNE- << / Tune-		

